

GEN 2.4 LOCATION INDICATORS

Location indicators marked with an asterisk (*) cannot be used in the address component of AFS messages.

1. ENCODE		2. DECODE	
<i>Location</i>	<i>Indicator</i>	<i>Indicator</i>	<i>Location</i>
Agalega /Agalega Airstrip	*FIMA	*FIMA	Agalega /Agalega Airstrip
Mauritius FIR	FIMM	FIMM	Mauritius FIR
Mon Loisir Airstrip	*FIML	*FIML	Mon Loisir airstrip
Rodrigues/Plaine Corail Airport	*FIMR	*FIMR	Rodrigues/Plaine Corail Airport
Sir Seewoosagur Ramgoolam International Airport	FIMP	FIMP	Sir Seewoosagur Ramgoolam International Airport